SWEEX
forward living

Contents

1	PREFACE		3
2	SAFETY PRECAUTIONS		3
3	IN THE CARTON		5
4	FRONT&BACK CONNECTIONS OF LCD		6
5	INSTALLTION DRAWINGS	Power Cord Connection	7
		Antennas Connection	7
		SCART Connection	8
		YPbPr Connection	8
		S-Video Connection	9
		VGA(PC) Connection	9
		HDMI Connection	10
6	REMOTE CONTROL	Remote control instructions in TV mode	11
		Remote control instructions in TELETEXT mode	12
		Remote control instructions in DVD mode	13
		Remote control setup	14
7	TV OPERATION	First Time Installation	15
		TV Information	16
		VIDEO menu options	17
		Audio menu options	18
		Setup menu options	18
		Timer menu options	22
		Function menu options	22

8	DVD OPERATION	Basic operation	24
		MP3/JPEG Playback	24
		Function Settings	25
		DVD Function General setup	25
		System Setup	25
		Language Setup	28
		Audio Setup	29
		Digital Setup	30
9	TROUBLESHOOTING AND ADVICE		31
10	SPECIFICATIONS		32

1.PREFACE

Thank you for buying this TV ! Please read this manual thoroughly before operating the TV. Make sure the TV was not damaged in transit. Should the TV is damaged, do no install it and contact your dealer. Check that you have all the accessories according to the model.

2.SAFETY PRECAUTIONS

Put the TV on a stable surface.

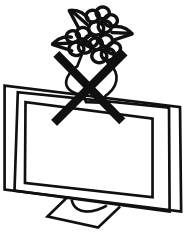

Do not place any material on the TV.

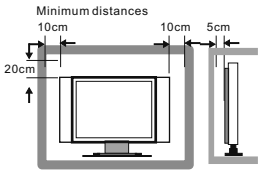

Do not use the TV with fixtures other than those provided or suggested by the manufacturer.

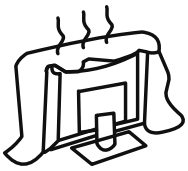

Do not block or cover the ventilation openings on the TV.
If you have a wall mount, check that it is steady.

Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV to fall.

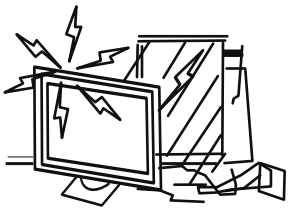

Keep the TV dry and away from humidity.

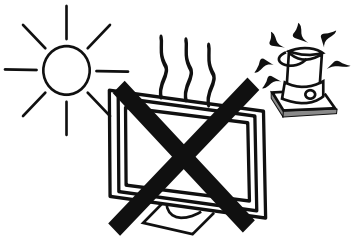

Keep the TV away from heat sources.

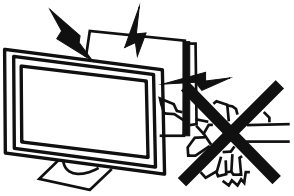

Unplug the TV before cleaning it. Do not use solvent or liquid to clean the TV.
Only clean the TV with a soft and dry cloth.

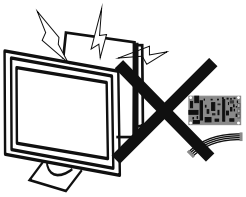

In case of troubleshooting, do not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks, short-circuits fire or other incidents.

Unplug the TV during lightening storms or when unused for long periods of time.

3.IN THE CARTON

LCD TV SET

Remote Control

User Manual

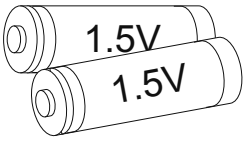

AAA Batteries

4.FRONT&BACK CONNECTIONS OF LCD

Front View

1. Press "SOURCE" to select the input source;
2. Press "MENU" to bring up the main menu on the screen;
3. Press "P+" or "P-" to scan through channels;
4. Press "V+" or "V-" to increase or decrease the sound level;
5. ▶|| PLAY/PAUSE in DVD mode;
6. ⏏ OPEN/CLOSE in DVD mode;
7. Press "POWER" button to turn standby mode on or off;
8. POWER INDICATOR:show blue in standby mode, light off when your TV is switch on or power is cut off.
9. REMOTE SENSOR: infrared sensor for the remote control.

Back View and Control Connections

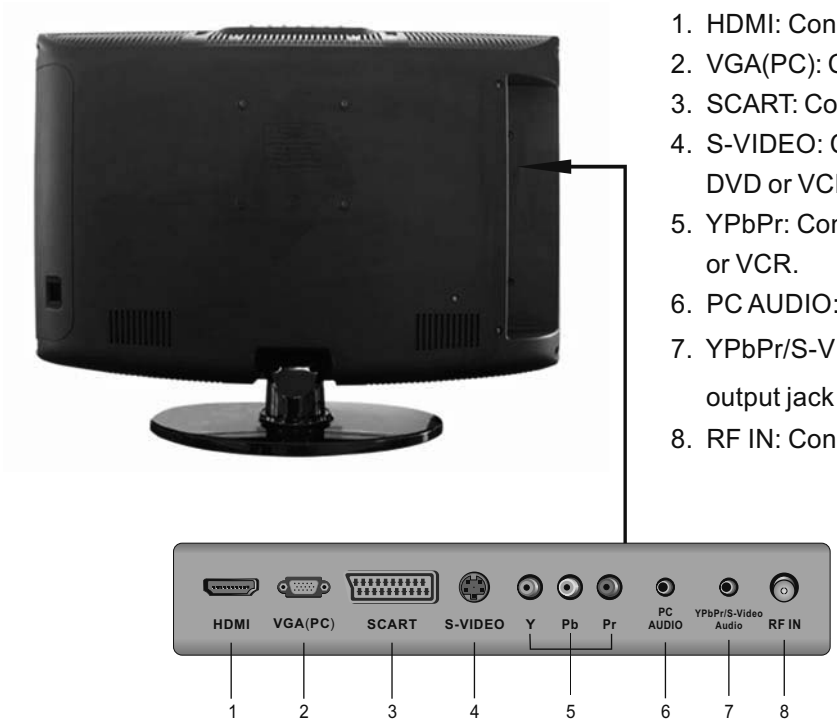

1. HDMI: Connect the HDMI output jack of DVD.
2. VGA(PC): Connect the PC-RGB output jack of PC.
3. SCART: Connect the SCART jack of VCR or DVD.
4. S-VIDEO: Connect the S-VIDEO output jack of DVD or VCR.
5. YPbPr: Connect the YPbPr output jack of DVD or VCR.
6. PC AUDIO: Connect the Audio output jack of PC;
7. YPbPr/S-VIDEO AUDIO: Connect the Audio output jack of DVD or VCR for YPbPr/S-VIDEO;
8. RF IN: Connect the antenna.

5.INSTALLTION DRAWINGS

Power Cord Connection

1. Connect the power cord correctly as shown.
2. Press the POWER switch of your LCD TV to switch on the LCD TV. The power indicator on the front panel lights up in Blue.

Antennas Connection

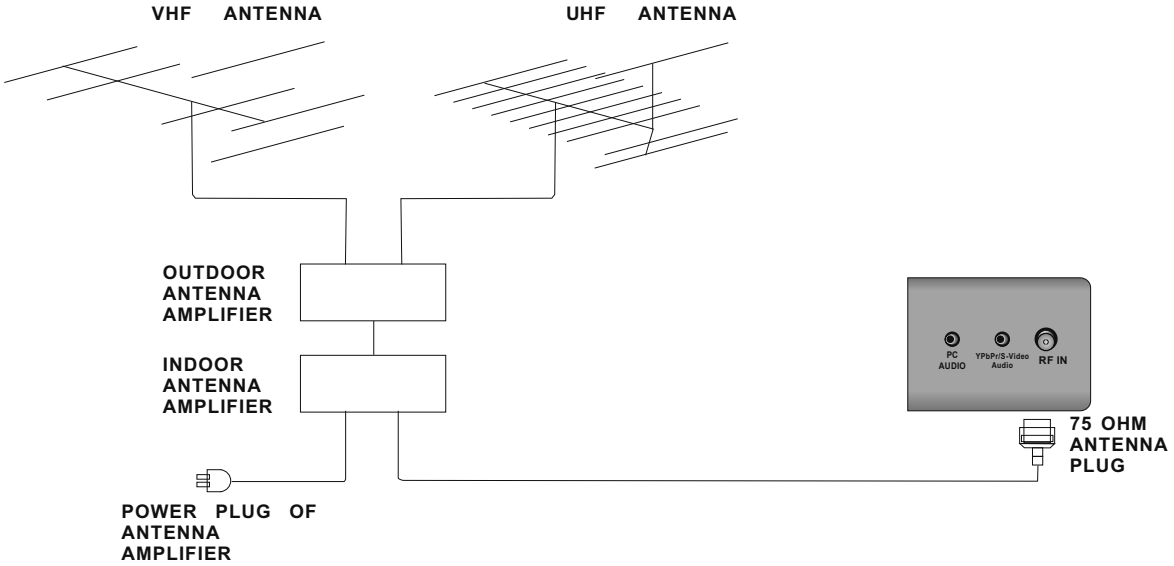

To ensure good picture and sound, TV antenna system needs to be installed. The antenna system as Shown above can be sourced from TV equipment shops, which will provide service for correct installation and connection. After installation, insert the 75-ohm antenna plug into the antenna jack as shown above.

SCART Connection

Connect the SCART connector on the external video device to the SCART connector on the set using a SCART cable.Select SCART input source with using the SOURCE button.

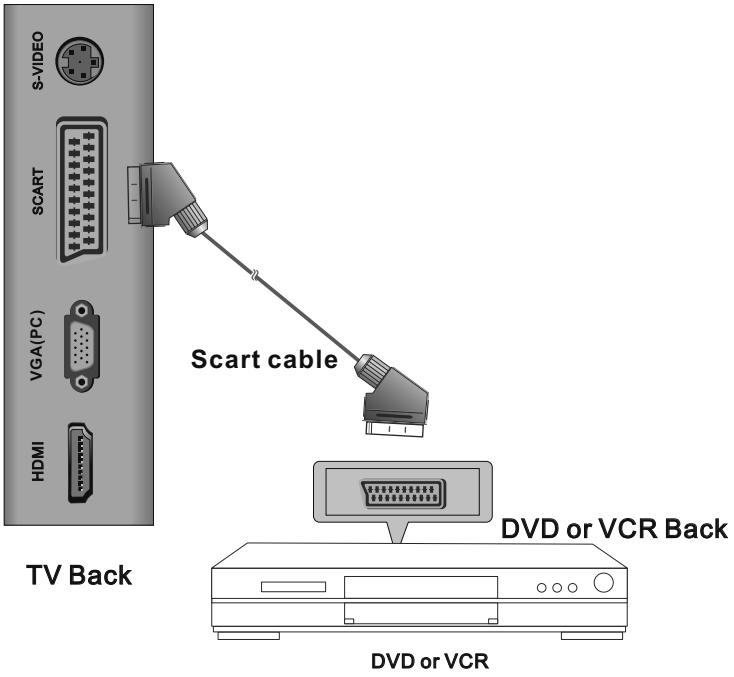

YPbPr Connection

Connect the YPbPr output of the DVD or VCR to the YPbPr input on the set. The picture quality is improved; compared to connecting a regular VCR to the video input. Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable.

Match the jacks colors :Y is green,Pb is blue,Pr is red,Audio left is white and Audio right in red. Select YPbPr input source with using the SOURCE button.

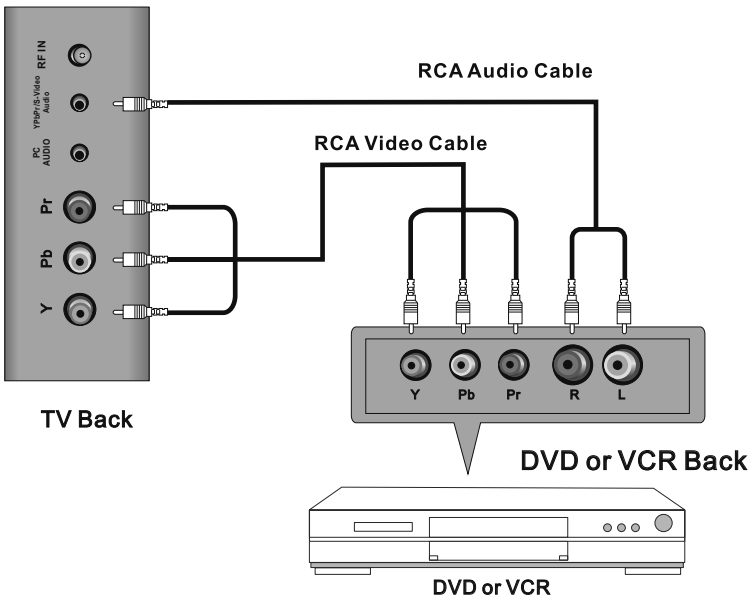

S-Video Connection

Connect the S-VIDEO output of the DVD or VCR to the S-VIDEO input on the set. The picture quality is improved compared to connecting a regular VCR to the video input.
Connect the Audio output of the DVD or VCR to the Audio input jacks on the set using the RCA cable.
Select S-VIDEO input source with using the SOURCE button .

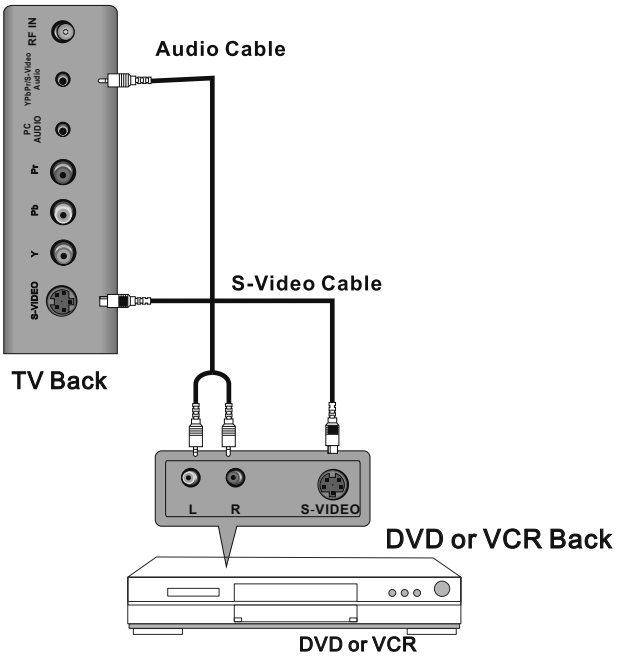

VGA(PC) Connection

Connect the RGB output of the PC to the VGA jack on the set. Connect the AUDIO output of the PC to the VGA jack on the set .Select the PC-RGB input source with using SOURCE button.

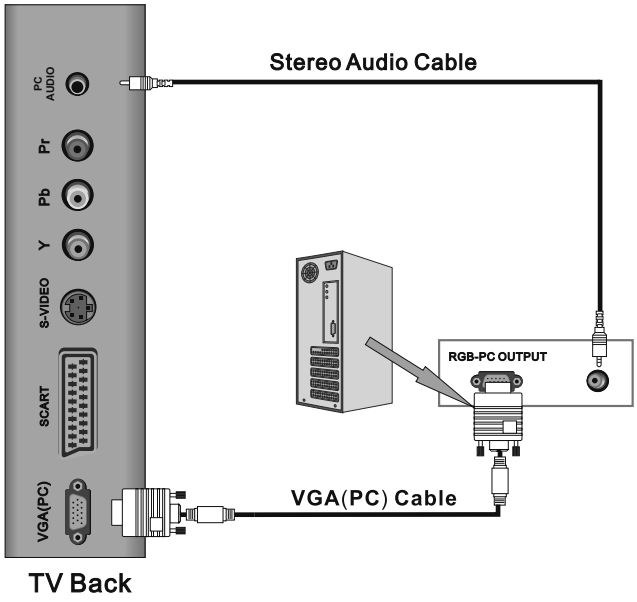

HDMI Connection

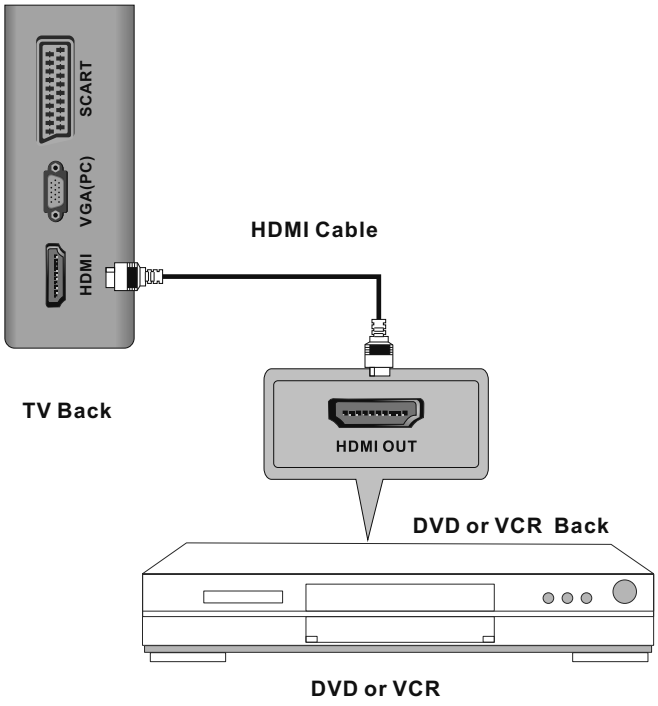

Connect HDMI output of the DVD to the HDMI input jack on the set. Select the HDMI input source with SOURCE button.

6.REMOTE CONTROL

Remote control instructions in TV mode

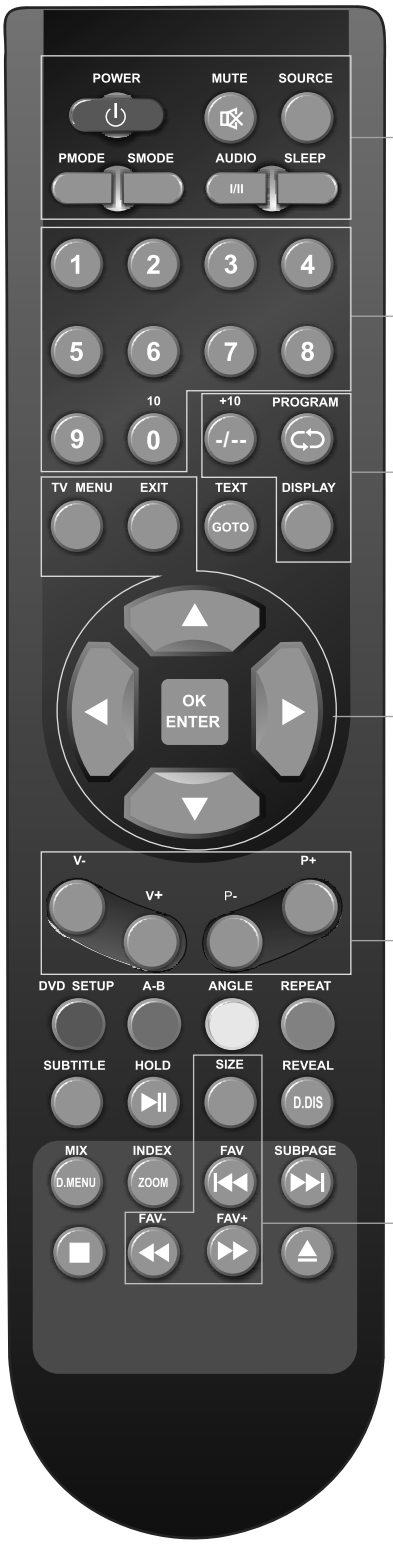

POWER
Turn the LCD TV ON or OFF.

MUTE
Press to mute the sound. Press again or press V+ to un-mute the TV.

SOURCE
Press to cycle through the input source in following:

TV → SCART → S-VIDEO → YPbPr → VGA → DVD → HDMI → TV

PMODE
Press repeatedly to cycle through the available video picture modes.

SMODE
Press to cycle through the different sound settings.

AUDIO(I/II)
Press to search the NICAM modes.

SLEEP
Lets you select amount of time before your TV turn itself off automatically.

NUMBER BUTTONS
Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.

-/--
Press this button to enter a program number for multiple program channel such as 2-1,etc.

Return to the previous channel viewed.

DISPLAY
Press to display the source and channel's information.

THUMBSTICK(▲/ ▼/◄ / ►/ OK ENTER)
Allows you to navigate the on-screen menus and adjust the system settings to your preference.

TV MENU
Brings up the main TV menu to the screen.

EXIT
Exit the main TV menu to the screen.

V+/V-
Press to increase / decrease the sound level.

P+/P-
Press to scan through channels.

SIZE
Change the picture format.

FAV+/FAV/FAV-
Press to increase/decrease your favourite program in TV mode.

Remote control instructions in TELETEXT mode

NUMBER BUTTONS
Press 0-9 to select a teletext page.

TEXT
Press to switch between TV Teletext mode.

P+/P-
Page up and Page down.

COLOR BUTTONS
Select 4 Preferred TELETEXT page.

SUBTITLE
To display subtitle.

HOLD
Freeze the current page.

SIZE
Change the picture size.

REVEAL
Reveal or hide the hidden words.

MIX
TV and TXT pictures are mixed together in transparent background.

INDEX
Request index page when index link is valid.

SUBPAGE
TELETEXT Subpage.

Remote control instructions in DVD mode

AUDIO(I/II)
AUDIO selection buttons in DVD mode.

NUMBER BUTTONS
Numerical buttons for various data.

PROGRAM
Program a disc playing in a desired sequence.

GOTO
It is possible to get access to any point on the directly using the "GOTO" menu.
Press GOTO to access the "GOTO" menu.

THUMBSTICK(▲/ ▼/◄ / ►/ OK ENTER)
Allows you to navigate the on-screen menus and adjust the system settings to your preference.

DVD SETUP
Used for selecting programs. It may also be used to execute commands.

A-B
This button enables you to repeat a selected section from the disc.

ANGLE
Selects various camera angles for certain scenes or passages on the DVD during playback.

REPEAT
Press REPEAT to cycle through the repeat play options.

SUBTITLE
Select a different subtitle language(the DVD disc must have the subtitle you selected.

⏯
PLAY/PAUSE in DVD mode.

D.DIS
Press to display the DVD information of DVD mode.

SIZE
Change the picture format.

D.MENU
DVD disc menu Access to menu.

ZOOM
In play state, press ZOOM, the player will zoom in the picture one time.

⏮ ⏭
Jump to previous and next track.

■
DVD STOP

◀◀ ▶▶
Fast backward and forward key.

⏏
To eject the disc.

Remote control setup

1. Open the cover;
2. AAA size batteries, When inserting the batteries, make sure correct polarities as per”+“and ”-“ marks on the batteries and within the battery compartment;
3. Replace the battery cover.

To prevent battery leakage which may result in bodily injury or damage to the remote:

1. Install all batteries correctly as marked on the remote control.
2. Do not mix batteries:(OLD and NEW or CARBON and ALKALINE, etc)
   Remove batteries when the remote is not used for a long time.

7.TV Operation

In this manual, the OSD (On Screen Display) may be different from your TV's, because this is just an example for the TV operation.

First Time Installation

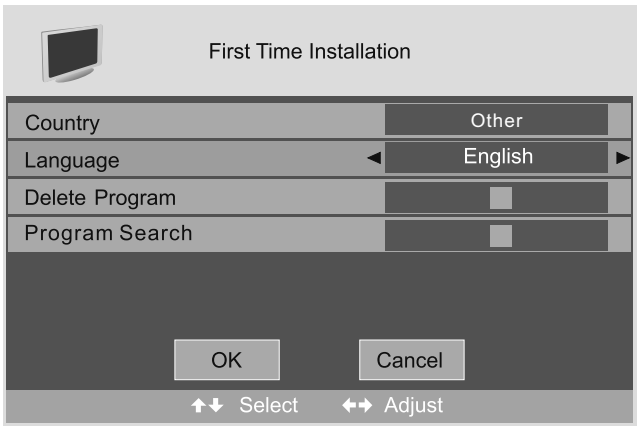

If this is the first time you open the TV and there is no programs in the TV memory, the **First Time Installation** menu will appear in the picture.

Country

Press ▼ / ▲ button and then use ◄ / ► to select the country.

Language

Press ▼ / ▲ button and then use ◄ / ► to select the OSD language.

Delete Program

Press ▼ / ▲ button and then use ◄ / ► to select whether to delete all the programs.

Program Search

Press ▼ / ▲ button and then use ◄ / ► to select whether to start searching the programs.

After setting the items, select OK to finish the first time installation, or select Cancel to exit this menu.

If you cancelled the first time installation, it will remind you whether to set the first time installation next time.

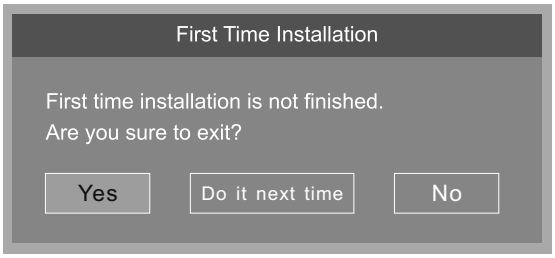

TV Information

Program Information

Press **DISPLAY** or **NICAM** button to display the program information.

1. The number of current program.
2. The colour system of current program, could be selected in **Manual Tuning** menu(an option of **SETUP** menu).
3. The name of current program.
4. The label of current program, you can label it in **Manual Tuning** menu(an option of **SETUP** menu).
5. The sound system of current program, could be selected in **Manual Tuning** menu(an option of **SETUP** menu).
6. The NICAM mode of current program.

If the icon of NICAM mode is red, it means the current program supplies multi NICAM signals, and you can select it by pressing **NICAM** button.

The NICAM modes and relative icons:

Mono Stereo Dual Ⅰ Dual Ⅱ

VIDEO menu options

Press **MENU** button on the front panel or **TV MENU** on the remote control to display the main menu.

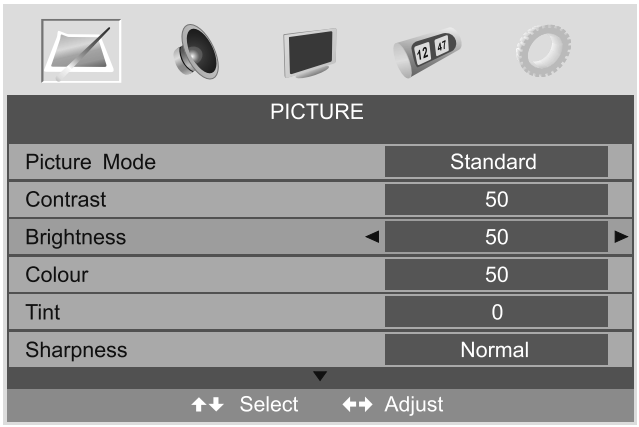

1. Press ◄ / ► button to select **PICTURE** in the main menu.
2. Press ▼ / ▲ button to select the option that you want to adjust in the **PICTURE** menu.
3. Press ◄ / ► button to adjust.
4. When you are satisfied with your adjustment, press the **TV MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

Picture Mode

Select Picture Mode in PICTURE menu. (Available picture mode: Standard, Personal, Movie, Sport, Mild, Game.)
If you change the value of Contrast, Brightness, Colour, Tint , Sharpness or Colour temperature on the picture menu, the picture mode will be changed to "Personal" automatically. You may select the picture mode directly by pressing PMODE button.

TIPS: You can press **PMODE** button on the remote control to select the Picture Mode directly.

Contrast

Press ▼ / ▲ button and then use ◄ / ► to adjust the contrast of the picture.

After adjust the value you want, press **TV MENU** button to return to the preview MENU.

Brightness

Press ▼ / ▲ button and then use ◄ / ► to adjust the brightness of the picture.

Colour

Press ▼ / ▲ button and then use ◄ / ► to adjust the colour saturation.

NOTE: This option is invalid in PC mode, and it will be shown in gray.

Tint

Press ▼ / ▲ button and then use ◄ / ► to adjust the tone of colour when your system is in NTSC.

Sharpness

Press ◄ / ► to select the sharpness mode of your TV. (Available Sharpness Mode: Normal,Sharp, Sharpest, Softest, Soft.)

Colour temperature

Select an optimum colour temperature mode to suit your eyes for viewing among Normal, Warm and Cold.

NOTE: This option is available only in PC mode.

DNR (Digital Noise Reduction)

If the broadcast signal received is weak, you can select the DNR option to reduce the video noise level between Off, Low,Mid and High.

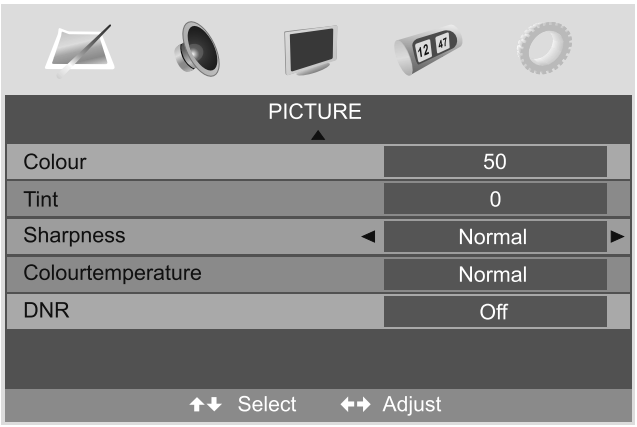

AUDIO menu options

Press **MENU** button on the front panel or **TV MENU** on the remote control to display the main menu.

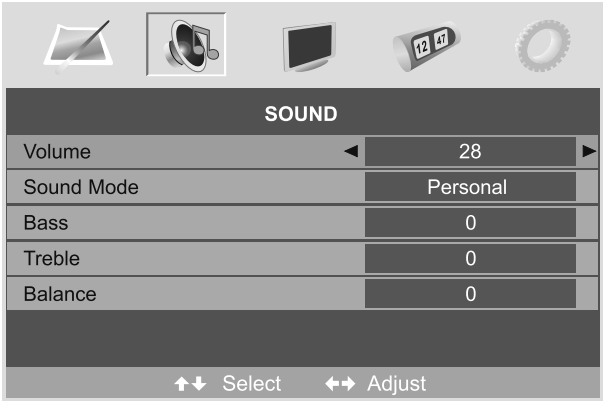

1. Press the ◄ / ► button to select **SOUND** in the main menu.
2. Press the ▼ / ▲ button to select the option that you want to adjust in the **SOUND** menu.
3. Press the ◄ / ► button to adjust.
4. When you are satisfied with your adjustment, press the **TV MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

Volume

Press ▼ / ▲ button and then use ◄ / ► to adjust the sound level.

After adjust the value you want, press **TV MENU** button to return to the preview MENU.

Sound Mode

Select Sound Mode in SOUND menu. (Available sound mode: Peraonal, Voice, Music, Theatre.)
If you change the value of Bass and Treble on the Sound menu, the sound mode will be changed to "Personal" automatically.
You may select the sound mode directly by pressing SMODE button .

TIPS: You can press **SMODE** button on the remote control to select the Sound Mode directly.

Bass

Press ▼ / ▲ button and then use ◄ / ► to increase or decrease the level of the lower-pitched sounds.

Treble

Press ▼ / ▲ button and then use ◄ / ► to increase or decrease the level of the higher-pitched sounds.

Balance

Press ▼ / ▲ button and then use ◄ / ► to adjust the audio output between ◄ / ► speakers.

Setup menu options

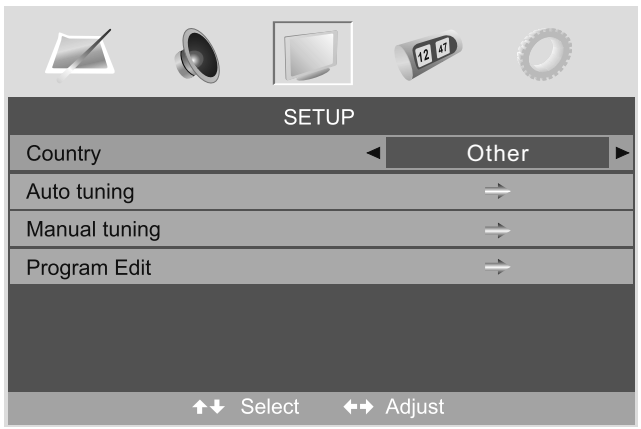

1. Press the ◄ / ► button to select SETUP in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the SETUP menu.
3. Press the ◄ / ► button to adjust.
4. When you are satisfied with your adjustment, press the **TV MENU** button to return to the previous menu or press the EXIT button to exit the main menu.

Country

This option allows you to select the country.

Auto tuning

This option allows you to tune the channels that can be received automatically.

Note: Before you perform Auto Tuning, you must choose the country where you are by selecting **COUNTRY** option.

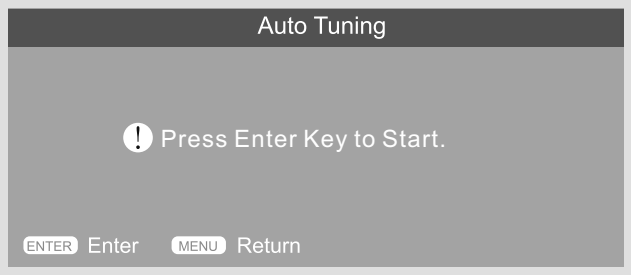

Press **ENTER** key to start.

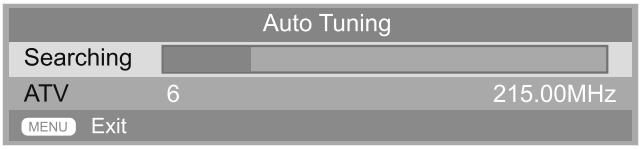

You can press **TV MENU** button to stop auto tuning and close the OSD menu.

Manual Tuning

This option allows you to perform Manual Tuning.

Note: Before you perform Manual Tuning, you must choose the country where you are by selecting Country option in the **FUNCTION** menu.

1. Press ◄ / ► to select Manual tuning in **SETUP** menu.
2. Press ▼ / ▲ to perform your selection, the menu of Manual tuning will display on the screen.

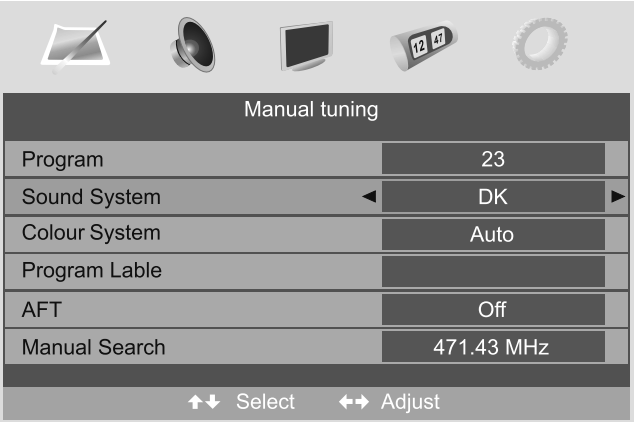

Program

The current program number. Press ◄ / ► to select the upper or lower program.

Sound System

Press ◄ / ► to select a corresponding sound system, such as DK, L/L', BG,I.

Colour System

Press ◄ / ► to select a corresponding colour system, such as Auto, PAL, SECAM.

Program Label

This option allows you to label a channel, you can also relabel the programs have been labeled.

1. Select a channel you want to labeled.

2. Press▼ / ▲ select Program Label in SETUP menu.

3. Press▼ / ▲ to perform your selection. The menu of program label will display as below:

4. Press the numeric buttons to input the numbers directly or press ▼ / ▲ to select the letters.
5. Press ◄ / ► to move the cursor.
6. Press **ENTER, TV MENU** or **EXIT** button to confirm and return to previous menu.

AFT (Auto Fine Tune)

Due to weak signals or a wrong antenna configuration, some of the channels may not be tuned to the best reception condition. AFT function allows you to fine tune channel selected(the frequency of channel is around the value in

Manual Search option.

Manual Search

This option has two functions:
1. Set the frequency of channel for AFT option.
2. Press ► button for 3+ seconds and it will start auto tuning from this frequency.

Program Edit

This function allows you to sort the TV programs according to your preferences, as following:

1. Press ▼ / ▲ to select Program Edit in SETUP menu.
2. Press ◄ / ► to enter into the sub menu, a channel list will display.
3. Press ▼ / ▲ to select the channel in the list which you would like to sort.
4. Press ► to perform your selection.
5. Press ▼ / ▲ to select the location you would like to place the channel.
6. Press ◄ to perform you selection.
7 . Press **TV MENU** to return to the previous menu or press EXIT to exit.

SETUP menu of VGA input (for setting the PC picture position):

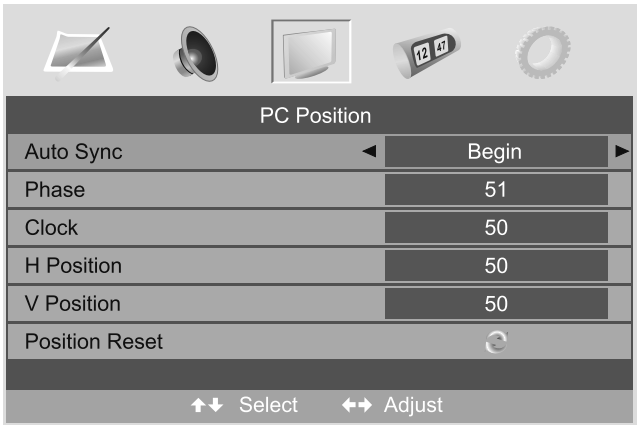

SETUP menu of HDMI input (for setting the HDMI picture position):

SETUP menu of YPbPr input (for setting the YPbPr picture position):

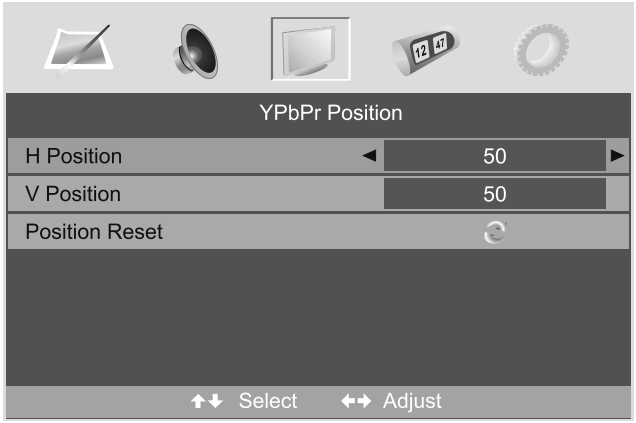

Timer menu options

Press **MENU** button on the front panel or **TV MENU** on the remote control to display the main menu.

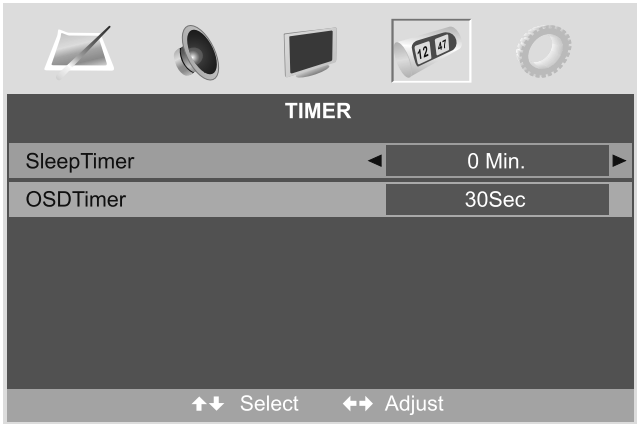

1. Press the ◄ / ► button to select TIMER in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the TIMER menu.
3. Press the ◄ / ► button to adjust.
4. When you are satisfied with your adjustment, press the TV MENU button to return to the previous menu or press the EXIT button to exit the main menu.

Sleep Timer

Select the sleep time to put automatically the TV in standby mode. Timer can be selected as 0min, 15min, 30min,45min, 60min,75min,90min,105min,120min. Also you can select the sleep time by pressing **SLEEP** button repeatedly.

OSD Timer

You can select the time when the OSD display on the screen such as: 5Sec,10Sec,15Sec,20Sec,25Sec,30Sec.

Function menu options

Press **MENU** button on the front panel or **TV MENU** on the remote control to display the main menu.

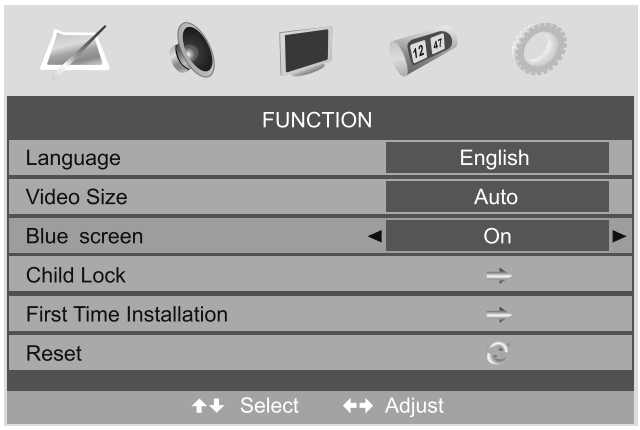

1. Press the ◄ / ► button to select FUNCTION in the main menu.
2. Press the ▼ / ▲ button to select your option what you want to adjust in the FUNCTION menu.
3. Press the ◄ / ► button to adjust.
4. When you are satisfied with your adjustment, press the **TV MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

Language

Press ◄ / ► to select the OSD language.

Video Size

This option allows you to select the screen display mode which best corresponds to your viewing requirements.

Note: The available aspect mode may be different in different input signal.

Blue screen

This option allows you to select the blue background on or off. If on, the screen background will turn blue at very weak or no signal condition.

Child Lock

Press ENTER or ► button to set the child lock.

PIN Code:

Delete 0~9 Input ENTER Enter

You need to enter the PIN code if the Child lock is set “on”, and the default PIN code is empty, you can press **ENTER** button directly to enter.

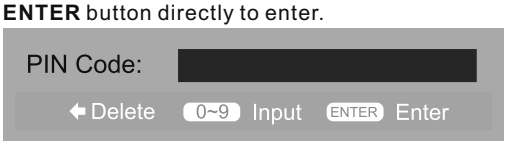

TIPS:The superuser’s(administrator’s)password is 8329.

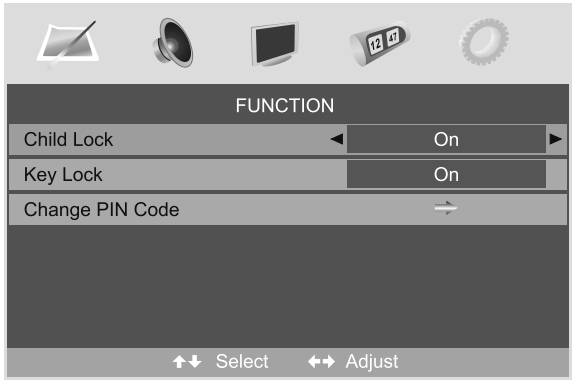

Child Lock

Press ENTER or ► button to set the child lock.

Key Lock

Press ENTER or ► button to set the key lock.

Change PIN Code

Press ► button to enter **Change PIN Code** menu.

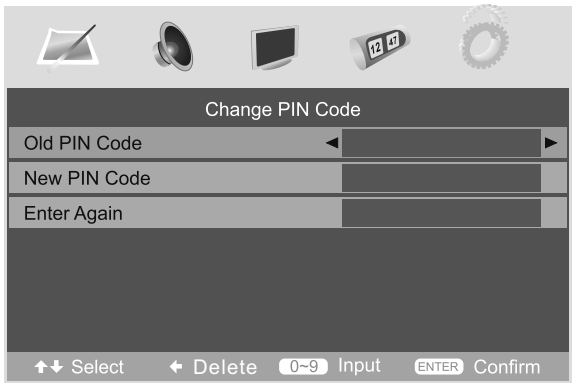

Old PIN Code

Press 0~9 buttons to enter the correct old PIN code, you can not change the PIN code if you entered a wrong PIN code.

New PIN Code

Press 0~9 buttons to enter the new PIN code you want

Change PIN Code

Press 0~9 buttons to enter the PIN code you entered in the **New PIN Code** menu again to confirm the new PIN code.

First Time Installation

Press ► button to open the **first time installation** menu, and the operation of this menu is in page 3.

Reset

Press ENTER or ► button to reset the TV to the factory default.

8.DVD Operation

Basic Operation

1. Press **Source** button on the remote controller to select DVD input source.
2. Insert DVD/CD disc into DVD/CD slot.

DVD Setup Mode

Setup Mode provides the menu for the configuration of General Setup Page, Speaker Setup Page, Video Setup Page and Preference Page .
Item selection in the Setup Menu is done by using the Navigation Arrows, SETUP button and the OK button.
Press the SETUP button first , enter into SETUP menu, then press the DIRECTION RIGHT button, you can enter into the next Sub-menu.

Press the SETUP button again to exit the Setup Menu.

MP3/JPEG Playback

After loading and scaning the MP3 / JPEG CD&DVD, it will initially display the CD/DVD contents.
Screen as follow:

MP3 Playback:

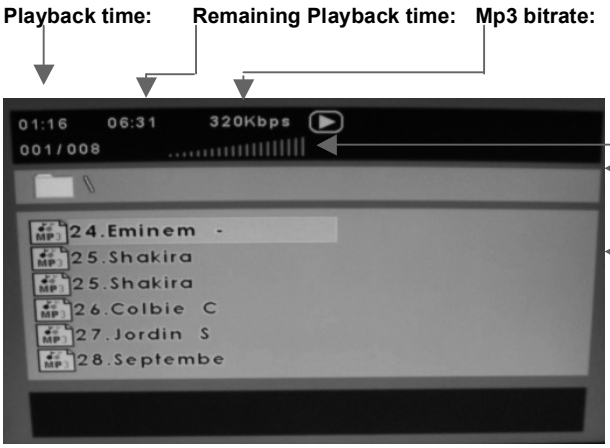

Photo Playback:

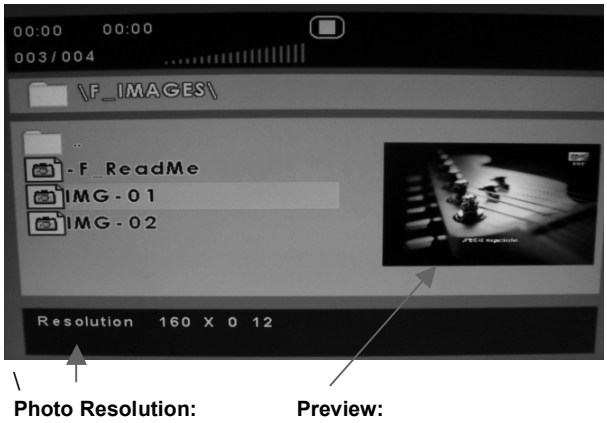

- Using the navigation buttons enables you to check you favorite folder and playback the first file or move to the your favorite folders.

NOTE:

- Press numeric buttons to select the contents directly. For number over 10, press +10 button first. (e.g. File number 15, press+10 then 5.)
- When playing or pauseing images, you may use navigation buttons to flip / rotate the picture.
▲ button to flip horizontally.
▼ button to flip vertically.
◄ button to rotate left 90˚.
► button to rotate right 90˚.
- The maximum JPEG image size that can be displayed is 1280 x 1024.

General Setup

r

TV Display

ENG

This is used to select the aspect 4:3/PS, 4:3/LB, 16:9.

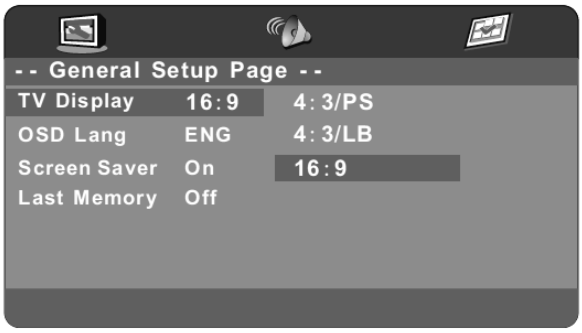

OSD Language

This is used to select the OSD language.

English
French
Spanish
Italian
Russia
Dutch
Polish

Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is frozen for a few minutes. This saver can keep the screen from being damaged.

On (Start the screen saver)

Off (Remove the screen saver).

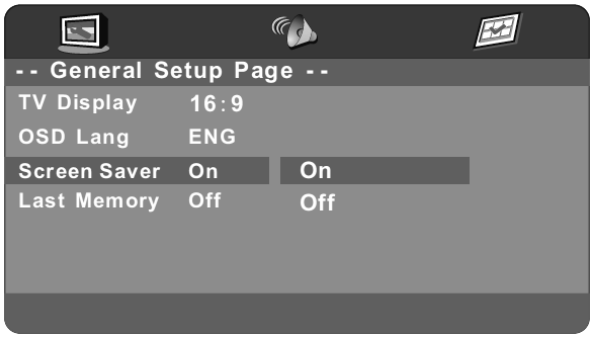

Last Memory

Can set the items on the last memory, “on”and “off” option.
Select “on”, shutdown the machine before the settings for memory, re-boot the machine setting.
Set near the same time.
Select “off”, every time the machine automatically switched back to the default settings
On (Start the screen saver)
Off (Remove the screen saver).
.

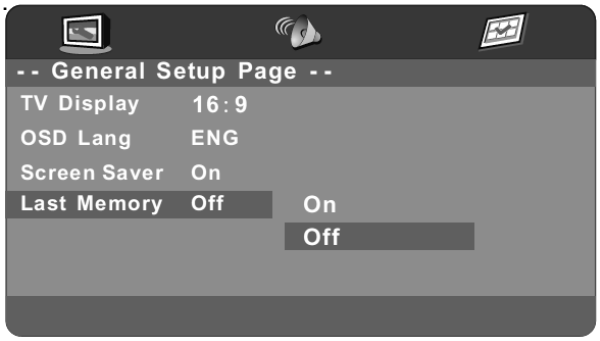

Audio Setup

Speaker Setup

In the “Audio Setup page” press ▼ ” button to select “Speaker Setup” item, press the “OK ENTER” or “▶” button (play) into the “Speaker Setup Page”.

Downmix

LT/RT

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.

Stereo

A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.

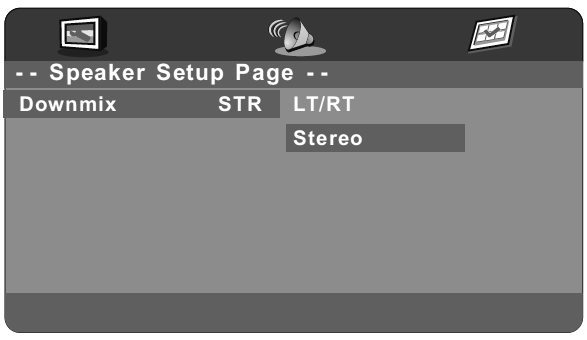

Dual Mono
This is used to select the Stereo, L-MONO, R-MONO and MIX-MONO.

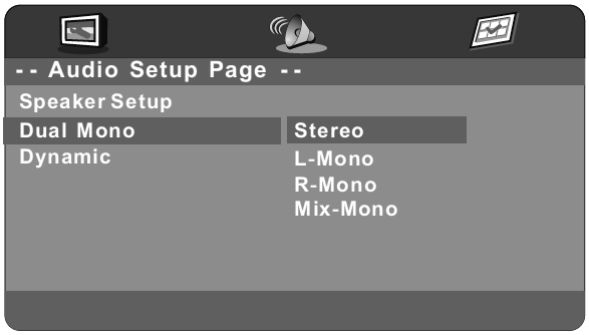

Dynamic
This option is used to set the compression ratio in order to control the sound (Volume) contrast.

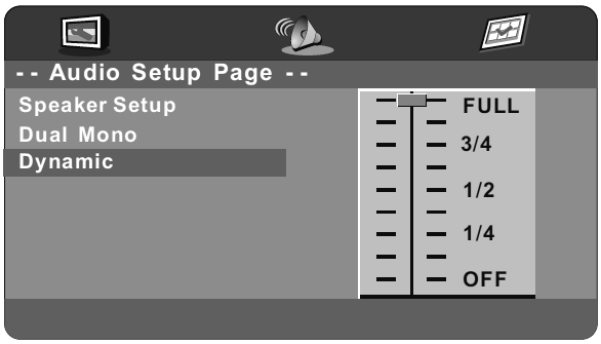

Preference Setup

You must sure no disc in the DVD then you can select Preference Page.

TV Type

PAL
This is selected when the player is connected to an PAL System TV.

MULTI
The player will set the TV system according to the disc in the tray.

NTSC
This is selected when the player is connected to a NTSC System TV.

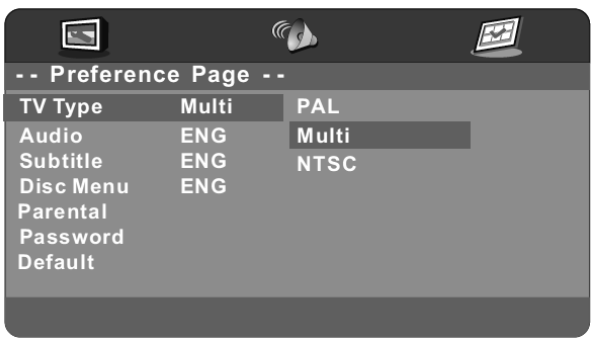

Audio

If a language listed below is recorded on the disc, you can play the sound in such language.
If not, the language recorded will be used.

English
French
Spanish
Italian
Russia
Dutch
Polish

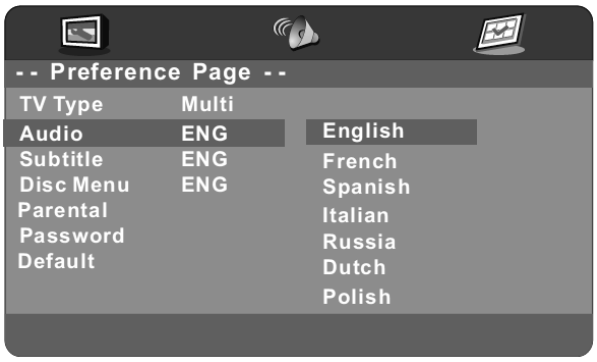

Subtitle

If a language listed below is recorded on the disc, you set the subtitle to be displayed in such language.
If not, the language recorded will be used.

English
French
Spanish
Italian
Russia
Dutch
Polish

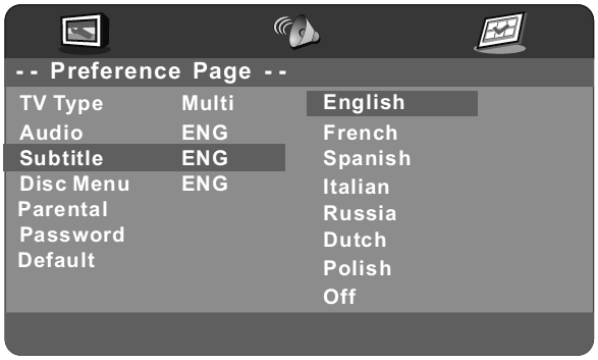

Disc Menu

If a language listed below is record on the disc, you can set the Menu to be displayed in such language. If not, the language recorded will be used.

English
French
Spanish
Italian
Russia
Dutch
Polish

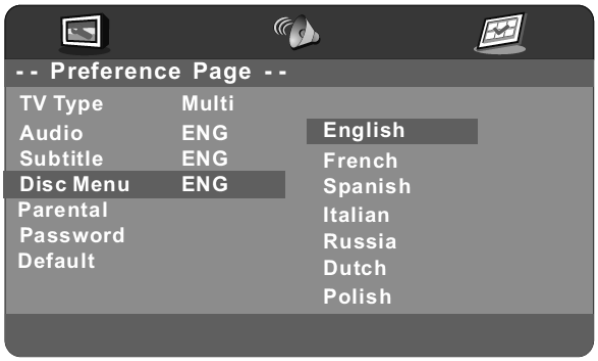

Parental

When playing disc with parental lock function, you may select an Age Control Grade according to grade of disc and your own preference. For example, if PG is selected, DVD Video disc rated higher than the PG grade cannot be played.

KID SAFE
G
PG
PG 13
P GR
R
NC 17
ADULT

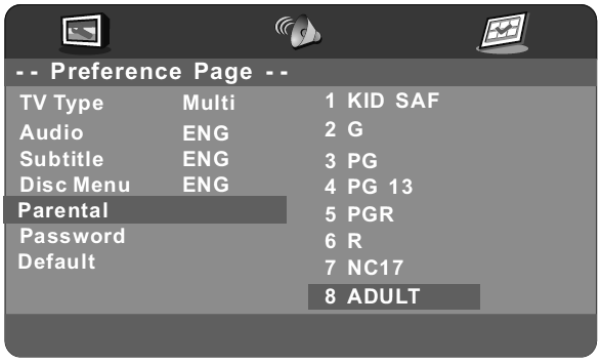

Password

User can change the password that is required when the user wants to change the Age Control Grade in the Parental Lock function.

NOTE:(Default password is 123456)

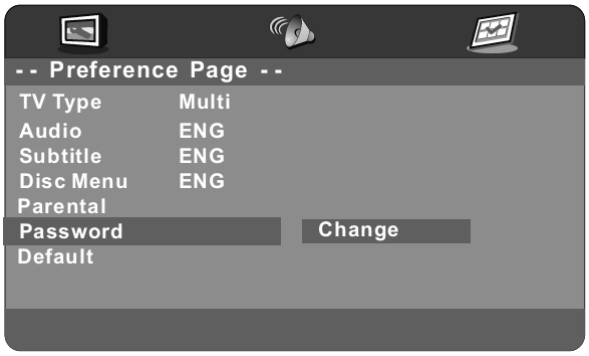

Default

User can load the original factory setting by choose RESET and press OK button.